


GRS[®] MicroBlock[®] Short Jaw Kit

REPLACEMENT JAW KIT • #003-651

1. REMOVE OLD JAWS

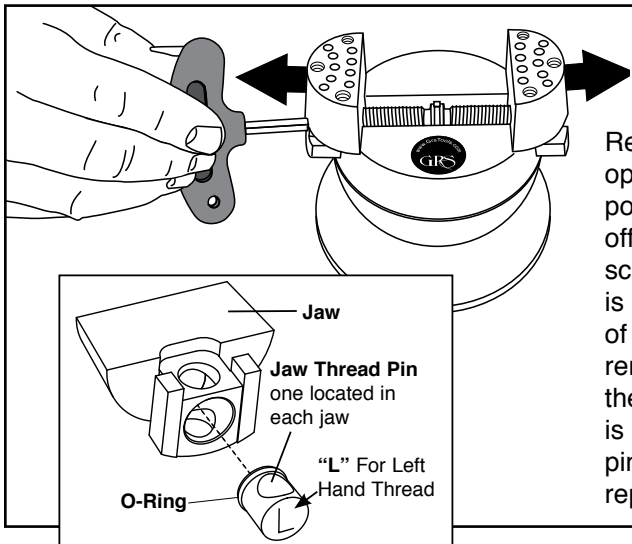


NOTE: Overtightening the jaws will cause wear and damage to the threads.

Remove the jaws by opening them as wide as possible until they come off the end of the jaw screw. The jaw thread pin is located on the underside of each jaw. **NOTE:** Before removing pins, locate the one with the "L". This is the left hand thread pin and will need to be replaced with the same.

Jaw
Jaw Thread Pin
one located in each jaw
O-Ring
"L" For Left Hand Thread

2. REPLACE WITH SHORT JAWS

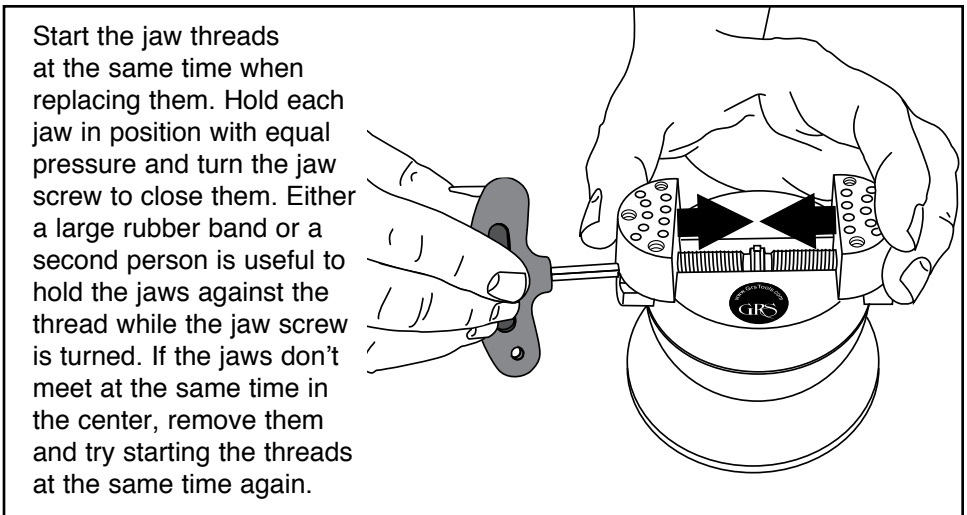

Start the jaw threads at the same time when replacing them. Hold each jaw in position with equal pressure and turn the jaw screw to close them. Either a large rubber band or a second person is useful to hold the jaws against the thread while the jaw screw is turned. If the jaws don't meet at the same time in the center, remove them and try starting the threads at the same time again.

GLENDO LLC

900 Overlander Road • Emporia, KS 66801 USA
800-835-3519 • 620-343-1084 • Fax: 620-343-9640
grs@grstools.com • www.grstools.com
Last Updated: 2017/07/07