

UltraSpa™ Ultimate Professional Quality Jewelry Cleaning System



**GEMORO**®
The Sparkle Experts

GemOro UltraSpa



1. Ultrasonic tank
2. Clear plastic evaporation resistant cover
3. Control panel: Steamer power and ready lights & Ultrasonic power light / timer button
4. Steam nozzle
5. Stainless steel removable mesh basket
6. On/Off Switch
7. Steamer fill cap
8. Steam activation lever
9. Small basket hook
10. Tweezer storage compartment



INSTRUCTIONS FOR USE & SAFETY PRECAUTIONS

Congratulations on your purchase of the GemOro UltraSpa! The UltraSpa has been factory tested for performance as well as safety, and does an incredible job cleaning jewelry and more via its two-stage cleaning process using professional grade ultrasonic technology as well as high-pressure steam.

Please be aware that not all jewelry or other items may be cleaned in an ultrasonic cleaner or in a steam cleaner. Always confirm if the jewelry or other item may be cleaned in either an ultrasonic or with steam (or both) prior to cleaning it with the UltraSpa.

INCLUDED PARTS

1. Steamer fill cap.
2. Full size perforated removable ultrasonic basket.
3. Measuring fill cup for ultrasonic and steam cleaner. Please note that there is a built-in funnel under the steamer fill cap and that water may be slowly poured into this funnel when filling the steamer tank.
4. Rubber tipped locking stainless steel jewelry holding tweezers (may be stored in the rear storage compartment slot).
5. Stainless steel mesh clamshell style basket for holding small pieces of jewelry such as ear studs, rings, etc. (may be stored on the rear storage compartment hook).
6. Stainless steel basket (holds jewelry when steaming or air drying)
7. Steam Residue Mat (place in front of steamer under nozzle to protect counter).



SPECIFICATIONS

Power Voltage: 110-120V AC

Rated Frequency: 60Hz Rated

Power: 1000W

Pressure: 0-50PSI

Maximum Steamer Tank Water Fill Capacity: 11oz (5oz + 6oz fill cups)

Maximum Ultrasonic Tank Water Fill Capacity: 15oz (approximately three 5oz fill cups or to MAX fill line on tank)

QUICK START GUIDE

DO NOT PLUG IN YET!

1. Firmly insert the stainless steel basket in the slot located under the steam nozzle. Place the UltraSpa with the Steam Residue Mat positioned on your counter under the nozzle, or position it over the edge of your sink or counter and forego the use of the Steam Residue Mat.
2. Carefully unscrew the gray fill cap.



3. Fill the measuring cup with water to the indicated mark (two 5oz cups are required to produce the driest steam or 10oz total, alternatively, one 5oz cup plus one 6oz cup or 11oz total, are required to reach the maximum steamer tank capacity). Slowly pour it in to the steamer tank funnel opening in the rear of the unit where the fill cap was inserted. Always be certain to **dry the excess water within the funnel area before replacing the cap.**



4. After sufficient water has been poured into the steamer tank, replace the gray steamer fill cap by hand tightening. **Do not over-tighten.**
5. Fill the ultrasonic tank with water or for best results, fill the tank with water that has been mixed with an ultrasonic cleaning solution to the MAX fill mark on the back of the ultrasonic tank (remove the perforated basket to see the fill mark). This will require filling the measuring cup to the 5oz. mark approximately three times. Note: In place of a professional ultrasonic cleaning solution, a household dishwashing soap that has a degreasing agent in it may be substituted.
6. Plug the UltraSpa into a grounded electrical outlet.



TO TURN ON THE ULTRASPA POWER AND STEAMER flip the switch located on the right side bottom of the appliance from the “0” mark to the “I” mark.

- The **STEAMER POWER blue** LED on the control panel will illuminate.
- When it has heated up sufficiently to produce steam (in approximately 6 minutes) the **STEAMER READY green** LED on the control panel will illuminate.



TO TURN ON AND USE THE ULTRASONIC CLEANER press the button on the top of the appliance labeled ULTRASONIC POWER / TIMER.



- The blue LED within the ultrasonic tank compartment will illuminate.
- Place jewelry in the gray perforated ultrasonic basket and then submerge it in the tank. Alternatively place appropriate sized rings, earrings, diamond ear studs or charms with tiny stones in the small stainless steel mesh clamshell style basket and submerge it in the ultrasonic basket within the tank.
- Jewelry that is very dirty should be cleaned first in the ultrasonic compartment and then with the steamer.
- The ultrasonic cleaner will operate for a 6-minute cleaning cycle and then automatically shut off. You can shut off the ultrasonic function manually if 6-minutes is not required by pressing the button a second time.

TO USE THE STEAMER

- The steamer may be used as soon as it has built up sufficient pressure to illuminate the green LED STEAMER READY light.
- Using the tweezers, hold jewelry approximately one inch beneath the steam nozzle. Be aware that both the gray fill cap steam nozzle and the steam are **HOT**.
- Then press down on the steam activation lever on the top rear, behind the fill cap, to release the steam.
- It is recommended to use short, one or two second bursts to prolong maximum steam pressure.



WHEN IT BECOMES NECESSARY TO REFILL

- Turn the unit off by flipping the power switch located on the right side bottom of the machine to the “0” position.
- Unplug it from the power outlet.
- **Allow sufficient cooling time of approximately 30 minutes prior to refilling the tank. As a safety feature, the gray fill cap can not be removed until it has sufficiently cooled.**
- While maintaining an arms length distance from the machine **slowly unscrew the gray fill cap in the back.** As you are unscrewing the gray fill cap the remaining pressure will release from around it. Press down on the steam activation lever in the rear of the appliance to more quickly release the remaining steam in its tank. Remove the gray fill cap.
- Remove the ultrasonics transparent cover and basket from the tank.
- Lift the entire appliance by holding the handles on either side.
- Turn the appliance upside down over a sink to drain the steamer and ultrasonic tanks. To fully drain the steamer tank, while holding upside down, press the steam activation lever.
- Follow the instructions 1-6 on the Quick Start Guide above to refill the UltraSpa.



COMPLETE OPERATING INSTRUCTIONS – Steps 1 through 11 (WARNING: DO NOT PLUG IN OR TURN ON UNTIL YOU REACH STEP 5).

1. Place the UltraSpa upright on a flat, dry, level surface. Position the Steam Residue Mat on your counter just under the nozzle of the UltraSpa. Alternatively, you may position the UltraSpa's nozzle over the edge of your sink or counter and not use the Steam Residue Mat.
2. **Assuring that the steamer is cool**, unscrew the gray fill cap and remove it. After removing the gray fill cap, fill the measuring cup with water to the 5oz mark (two 5oz cups are required to reach the optimal steamer tank capacity for the driest steam, or alternatively one 5oz cup plus one 6oz cup are required to reach the maximum steamer tank capacity). Slowly pour it into the built-in funnel above the steamer tank. Do not overfill the tank. Because there is a vacuum inside the tank, water must be poured slowly allowing air to release from the tank opening; to speed up this process, pour water into the tank while holding down the steam activation lever which is located in the rear of the machine, behind the gray fill cap. Never overfill the tank or allow excess water to spill onto the UltraSpa or its power cord.
3. **Dry any excess water within the funnel area.** Replace the gray fill cap by hand tightening. Do not over-tighten.
4. Remove the clear plastic ultrasonic cover and the black perforated plastic ultrasonic basket. Fill the measuring cup up to the 5oz mark and pour it into the ultrasonic tank. Repeat this process approximately 3 times until the water reaches the MAX fill mark on the rear of the ultrasonic tank wall. Never overfill the ultrasonic tank or allow the water level in the tank to evaporate below the MAX fill mark.
5. Plug the UltraSpa into a grounded electrical outlet. Turn the UltraSpa steamer to the "I" or on position by flipping the power switch located on the right side bottom of the machine. The STEAMER POWER blue LED on the control panel will then illuminate. The STEAMER READY green LED on the control panel will illuminate once it has warmed up and is ready to be used. To turn on the UltraSpa ultrasonic mode, press the button on the control panel labeled ULTRASONIC POWER/TIMER. The ultrasonic will operate

for a timed 6-minute cleaning cycle period and then automatically shut off. Alternatively, it can be shut off manually by pressing the control panel button.

6. Using the stainless steel jewelry holding tweezers (which may be stored in the rear storage compartment slot), firmly yet carefully grasp the item being cleaned and hold it approximately one inch beneath the steam nozzle. The UltraSpa is also supplied with a small handheld stainless steel clamshell style basket (which may be stored on the rear storage compartment hook). This basket is ideal for holding small items such as rings, earrings, diamond ear studs, charms, and jewelry with tiny stones. Jewelry may also be stored in the stainless steel basket that is located under the steam nozzle. This basket may be used for air drying jewelry.
7. Jewelry that is dirty from body oil might only require steaming to bring back its luster. Jewelry that is very dirty from makeup, grime or dirt should be cleaned in a two stage cleaning process; first cleaned in the ultrasonic cleaner and then followed by cleaning it with the steamer.
8. Once the steamer has built up sufficient pressure and the green “STEAMER READY” LED has illuminated, press the steam activation lever, located on the top rear behind the gray fill cap. The steamer works best when using short, one or two second bursts. Allowing a brief delay between bursts gives the steamer time to rebuild steam pressure. To clean an item on all sides, rotate the item under the nozzle. **Allow the jewelry time to cool before wearing.**
9. When it becomes necessary to refill the UltraSpa steamer, first turn the unit off by flipping the power switch located on the right side bottom of the appliance and then unplug it from the power outlet. **Allow sufficient cooling time of approximately 30 minutes prior to attempting to refill the tank. As a safety feature, the gray fill cap can not be removed until it has sufficiently cooled. Unscrew the gray fill cap slowly at an arms length distance while allowing the tank to very gradually release any remaining tank pressure from around the gray fill cap. To remove the remaining pressure more quickly, press the steam activation lever to release the remaining steam from the tank.**

10. When it becomes necessary to replace the water in the ultrasonic tank, first turn off and unplug the UltraSpa. Remove the ultrasonic's transparent cover and basket, and then grasp the appliance with both hands while holding the built-in handles on either side. Turn it upside down over a sink to drain the tank. Always take a paper towel and clean the remaining residue inside the tank before refilling, as this will prolong the life of the tank.
11. Prior to storing the UltraSpa after use, turn the appliance off by flipping the power switch located on the right side bottom of the machine to the "0" position. Unplug it from the power outlet. Allow approximately 30 minutes of cooling time before storing.

When storing the UltraSpa for a prolonged period, empty the water in the ultrasonic tank and clean it, then dry it thoroughly. Then remove the gray fill cap by unscrewing it slowly while maintaining an arms length distance from it, allowing the tank to very gradually release its pressure. To release the pressure faster prior to removing the gray fill cap, you may press the steam activation lever on the top rear of the unit just behind the gray fill cap. Lift the UltraSpa by its handles and pour out the remaining water from its ultrasonic tank and steamer tank. To fully drain the steamer tank, while holding upside down, press the steam activation lever as it is draining.



PRECAUTIONS & WARNINGS

1. The UltraSpa is specifically designed for cleaning jewelry. Although there are many other cleaning applications for the UltraSpa (such as for cleaning dentures, eye glasses, hand tools, small parts, etc.), caution and common sense should be used at all times as the UltraSpa could damage the item and/or the operator.
2. Use caution: the steam cleaner releases very hot steam under high pressure. **Never touch the steam nozzle or the area surrounding it or the gray fill cap, as you may get burnt.**
3. The UltraSpa ultrasonic will clean well with regular tap water. However, for best results use a combination of a professional ultrasonic cleaning solution mixed with tap water. We recommend the Sparkle Pak Plus® (see below). Note: In place of a professional ultrasonic cleaning solution, a household dishwashing soap that has a degreasing agent in it may be substituted.

4. Never place items to be cleaned in the ultrasonic directly on the bottom of the ultrasonic tank. Use the supplied basket or tweezers. Note: the small handheld stainless steel clamshell style basket should be placed in the perforated gray ultrasonic basket within the tank and not placed directly on the tank bottom.
5. Never operate the UltraSpa ultrasonic without sufficient water in its tank.
6. **Be certain that the gray fill cap with its built-in safety release valve is screwed on by hand prior to use. Do not over-tighten. Never operate the UltraSpa steam cleaner without the fill cap properly installed.**
7. **The UltraSpa steam cleaner may only be used with pure regular tap water or distilled water. Never add any type of chemicals or cleaning agents to the water in the tank prior to steaming.**
8. The UltraSpa steam cleaner is designed to operate with a maximum of 11 oz of water in its tank. To produce the driest steam, it should be operated with 10oz of water. Do not overfill the steam cleaner tank. **To do so will produce a potentially hazardous sputtering of water and wet steam.**
9. **Always dry all excess water from within the funnel area prior to replacing the gray fill cap.** Any excess remaining water in the funnel area will boil out from around the gray fill cap (giving the appearance that the tank is leaking) until it has all evaporated. Never touch this boiling water or you may get burnt.
10. **Never plug in and attempt to operate the UltraSpa steamer without water in its tank.** If the UltraSpa runs out of steam during operation, turn it off and unplug it. Remove the ultrasonic's transparent cover and basket, then hold it upside down over a sink and dump the water from the ultrasonics tank. Then allow 30 minutes time for the steamer to cool prior to refilling the steamers tank with 10oz of water for driest steam and 11oz for maximum water capacity. Unscrew the gray fill cap after the UltraSpa has cooled while maintaining an arms length distance from it, allowing the steamer tank to very gradually release its pressure until fully released. Hold the UltraSpa upside down over a sink to drain the remaining water in the steamers tank prior to adding water.

11. **Never attempt to unscrew the gray fill cap and refill the UltraSpa steam cleaner tank while it is still hot and under pressure. There is a built-in safety feature that prevents the gray fill cap from being removed while the steam cleaner is hot.**
12. Lift or move the UltraSpa only by its easy-lift handles.
13. Always turn off and unplug the UltraSpa when not in use.
14. This appliance is not for space heating purposes.
15. **DO NOT IMMERSE IN WATER.**
16. **FOR INDOOR USE ONLY.**

MAINTENANCE

Your UltraSpa is designed to be a very low maintenance appliance. The durable ABS plastic exterior portion of the UltraSpa may be cleaned by hand using a soft cloth and a mild household cleaner that is suitable to be used on plastic. The ultrasonic tank, stainless steel front panel and nozzle may be cleaned with any household cleaner that is designed to safely clean stainless steel. Wipe dry using a soft cloth when finished.

Your UltraSpa is designed to be a very low maintenance appliance. With moderate usage, the tank (only when cool) that is located inside the steamer should be cleaned annually since water will leave calcium or lime residue in the tank that can be flushed out. With the steamer unplugged, pour a small amount of any household cleaner into the tank that is designed to remove hard water deposits. Make certain that it is non-caustic, non-flammable and non-combustible and that it may be used on stainless steel. Then fill the tank with tap water, swish around and allow it to remain in the tank for a while as specified in the cleaners instructions. Then pour out the solution in the tank; flush the tank out thoroughly multiple times with tap water and resume normal use.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Carefully read all instructions.
- Make sure the voltage of your electrical system corresponds to the voltage shown on the back of the machine.
- Do not touch hot surfaces. Use handles when moving.
- To protect against fire, electrical shock and injury to persons, do not immerse cord, plug or appliance in water or other liquid.
- Keep the appliance out of the reach of children and do not leave the appliance unattended while in operation.
- Unplug from the outlet when not in use and before cleaning. Allow it to cool before putting on or taking off parts and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return the appliance to your supplier or the manufacturer for examination, repair or adjustment.

- The use of accessory attachments not recommended by the appliance manufacturer may result in a fire, electrical shock or injury to persons.
- Do not use outdoors.
- Make sure the power cord does not hang over the edge of the table or countertop to avoid getting accidentally caught or entangled.
- Do not place the appliance or its electrical parts on or near electric stoves, cooking surfaces, or gas burners.
- Plug the cord into a wall outlet that provides the required amount of voltage to power the appliance. To disconnect, turn controls to “off,” then remove plug from wall outlet.
- Do not use the appliance for other than the intended use. This appliance may be used for domestic or commercial use. The manufacturer and its dealers decline all responsibility for any damage caused by improper, incorrect or irresponsible use.

WARNING: To reduce the risk of electric shock, do not remove the appliance’s cover. No user serviceable parts are inside. Only authorized service personnel should perform possible repairs of this appliance!

INSTRUCTIONS FOR THE POWER SUPPLY CORD

- If a long extension cord is used with this appliance, the marked electrical rating should be at least as great as the electrical rating of the appliance; use genuine UL Listed type cords with a 3-prong grounding plug. Do not defeat the safety purpose of the grounding prong.
- Do not use a power strip with multiple outlets with this appliance; to do so will likely trip its circuit breaker.

SYMBOLS USED IN THESE INSTRUCTIONS

Important warnings are identified by these symbols.

These warnings must be respected.

Failure to observe the instructions could result in electric shock, serious injury, burns, fire or damage to the appliance.



DANGER!

Failure to observe the warning could result in possibly life threatening injury from electric shock.

 **IMPORTANT!**

Failure to observe the warning could result in injury, damage to the appliance or damage to your jewelry.

 **DANGER OF BURNS!**

Failure to observe the warning could result in injury.

IMPORTANT - READ BEFORE CLEANING ANY TYPE OF JEWELRY

Prior to using the UltraSpa, always confirm if the jewelry in question may be cleaned either in an ultrasonic and/or steam cleaner. While some general guidelines are noted below for what may or may not be cleaned in an ultrasonic or steam cleaner, the guidelines are not represented as being complete and are not meant to be used as your final determination as to whether or not the jewelry in question is suitable for being cleaned by the UltraSpa. **Before cleaning any piece of jewelry or gemstone, you should consult with a professional to correctly identify the item you desire to clean and confirm that it is suitable to be cleaned in and by an ultrasonic or steam cleaner. GemOro disclaims, to the maximum extent permissible, (a) any responsibility for damage to jewelry or any other item, and (b) any responsibility for direct, special, incidental or consequential damages under any legal theory.**

For more information on jewelry care and cleaning, or assistance with finding qualified professionals with whom you may consult regarding the potential cleaning of your jewelry, visit the following jewelry industry websites:

American Gem Society (AGS)
Guide to Fine Jewelry Care
<http://www.ags.org>

Gemological Institute of America (GIA)
<http://www.gia.edu/>

Jewelers of America (JA)
<http://www.jewelers.org/>

Never place items to be cleaned directly on the bottom of the ultrasonic tank. To do so will void the warranty. Rather, to prevent damage to the tank, its transducer or the item being cleaned, always suspend items in the ultrasonic tank or use the provided baskets or tweezers that are made for the purpose.

Always inspect the setting for loose stones prior to cleaning. Stones that are insecurely set may fall out when cleaned in an ultrasonic or by a steam cleaner. Prior to cleaning, carefully touch the stone with a small probe (like a toothpick); the stone should not shift or wiggle. **If a stone falls out as a result of being cleaned in an ultrasonic or by a steam cleaner, please be aware that the stone would have eventually fallen out anyway. Most consider it better to have a stone fall out in a reasonably controlled environment as opposed to at random while wearing it.**

The following types of jewelry should only be cleaned by a knowledgeable professional:

- Antique jewelry
- Enamel jewelry
- Paste jewelry (which is common with costume jewelry)
- Costume jewelry
- Jewelry containing stones that have been set with glue

PRELIMINARY GUIDELINE FOR GEMSTONE CLEANING

GEMSTONE	TOUGHNESS	STEAM	ULTRASONIC
Alexandrite	excellent	usually	usually
Amazonite	poor	never	never
Amber	poor	never	never
Amethyst	good	risky	usually
Aquamarine	good	usually	usually
Citrine	good	risky	usually
Coral	fair	risky	risky
Diamond	good	usually	usually
Emerald	poor	never	never
Garnet	fair	never	usually
Iolite	fair	risky	risky
Lapis Lazuli	fair	never	risky
Opal	fair	never	never
Pearl	good	never	never
Peridot	fair	never	risky
Ruby	excellent	usually	usually
Sapphire	excellent	usually	usually
Spinel	good	usually	usually
Tanzanite	fair	never	never
Topaz	poor	never	never
Tourmaline	fair	risky	risky
Turquoise	fair	never	never
Variscite	fair	never	never
Zircon	fair	risky	risky

WARRANTY

Your UltraSpa features a 90 DAY LIMITED WARRANTY. The 90 DAY LIMITED WARRANTY CAN BE EXTENDED TO A ONE YEAR LIMITED WARRANTY if, within 30 days after purchase, the purchaser fills out and (i) electronically submits the on-line WARRANTY REGISTRATION FORM (which is available at <http://sykessler.com/warrantyregistration/>), or (ii) prints a copy of the on-line WARRANTY REGISTRATION FORM and mails it back to the address below this paragraph (postage prepaid) along with a copy of your invoice (bill of sale), within that 30 day period. In either case, the applicable warranty period begins on the date that your UltraSpa is purchased, as noted on the bill of sale (if supplied) or through the UltraSpa serial number tracking system, as interpreted by the factory (the “Warranty Commencement Date”). The 90 DAY LIMITED WARRANTY begins on the Warranty Commencement Date and expires 90 days thereafter (the “90 Day Warranty Period”), and the ONE YEAR LIMITED WARRANTY begins on the Warranty Commencement Date and expires one year thereafter (the “One Year Warranty Period”). During the applicable 90 Day or One Year Warranty Period, the UltraSpa is warranted against defects in materials and workmanship under normal and intended use. No warranty, of any kind or character, exists after the expiration of the applicable 90 Day or One Year Warranty Period. If a defect exists, at its option GemOro will (1) repair the product at no charge, using new or refurbished replacement parts, (2) exchange the product with a product that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original product, (3) in the event the UltraSpa is no longer available or has been discontinued and warranty coverage is applicable, at the factory’s sole discretion, a substantially equivalent cleaner may be substituted in place of the defective UltraSpa or (4) refund the purchase price of the product. A replacement product/part assumes the remaining warranty of the original product or ninety (90) days from the date of replacement or repair, whichever provides longer coverage. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes GemOro’s property. If and when a refund is given, your product becomes GemOro’s property. The purchaser shall incur the cost for return postage, insurance and handling for all warranty and non-warranty repairs.

GemOro® UltraSpa

WARRANTY REGISTRATION

10455 Olympic Drive, Dallas, Texas 75220 USA

Tel 800.527.0719 or 214.351.0380 Fax 800.832.9871 or 214.351.1903

Website: www.sparkleexperts.com and www.gemoroproducts.com

Email: sales@sparkleexperts.com and support@sparkleexperts.com

Warranty Registration: <http://sykessler.com/warrantyregistration/>

This warranty does not apply to: (a) damage caused by accident, abuse, misuse, misapplication, or non-GemOro products; (b) damage caused by service (including upgrades and expansions) performed by anyone who is not a GemOro authorized service provider; (c) a product or a part that has been modified without the written permission of GemOro; or (d) any GemOro product whose serial number has been removed or defaced.

THIS WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. GEMORO SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF GEMORO CANNOT LAWFULLY DISCLAIM IMPLIED WARRANTIES UNDER THIS LIMITED WARRANTY, ALL SUCH WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO THE DURATION OF THE APPLICABLE 90 DAY OR ONE YEAR WARRANTY PERIOD. NO GEMORO RESELLER, AGENT, OR EMPLOYEE IS AUTHORIZED TO MAKE ANY MODIFICATION, EXTENSION, OR ADDITION TO THIS WARRANTY.

GEMORO IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DOWNTIME, GOODWILL, AND DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY.

GemOro Sparkle Pak Plus® *ultimate jewelry cleaner*

This specially formulated, professional strength jewelry cleaner is truly amazing. Guaranteed to make your jewels sparkle like no other, remarkably restoring its brilliance to showroom-like new condition! Comes in pre-measured, easy to use packets you simply add to water.

- Instantly cleans Platinum, Gold, Silver, Metal Watch Bands, Base Metal, Diamonds, Gemstones, Fine Jewelry, Fashion/Costume Jewelry and more.
- Includes 10 packets of super-concentrated jewelry cleaner. Combined with water, makes almost 2 gallons of jewelry cleaning solution for you to use and reuse in a variety of applications!

Multi-Use Applications

1. ENHANCES ULTRASONIC CLEANING

Empty packet into a 1 to 1.5 pint ultrasonic (sold separately) and fill with warm water for the ultimate cleaning results!

2. SOAK BATH JEWELRY CLEANING

Empty packet into a container with a storage lid (not included) and fill with warm water. Allow jewelry to soak in the bath and gently scrub with an extra-soft bristle brush (not included) for dazzling results!

3. CONVENIENT SPRAY & WIPE CLEANING

Empty packet into a spray bottle (not included) and fill with warm water. Spray onto jewelry or apply to a soft cloth and wipe clean for stunning results!



Box of 10 Item #0937

GemOro BrilliantSpa®

BLACK DIAMOND Deluxe Personal Jewelry Steam Cleaner

New larger capacity steamer with even greater steam pressure! Cleans more & cleans faster – The best just got better!

- Professionally cleans diamonds, gold, silver and platinum jewelry
- Perfect size approximate 1-pint tank capacity steam cleaner
- Powerful steam cleaner safely generates a robust 50PSI of pressurized steam
- Using regular tap water safely blasts away dirt, grime, body oil, makeup and more
- Advanced LED indicator lights show when unit is heating and when it is ready to steam
- Bright blue LED light illuminates jewelry while being steam cleaned
- Features an unrestricted cleaning zone, removable cleaning / drying basket and convenient on / off power switch
- Easy-lift handles for moving
- Cabinet made of durable, long-life ABS, with contemporary stainless steel accent panels
- Includes jewelry holding tweezers, basket, steam residue mat and water funnel with measuring fill cup
- Complements sister product: GemOro Sparkle Spa Pro® Personal Ultrasonic Jewelry Cleaner
- Designed in the USA with European flair
- Built for safety – ETL Listed
 - 2 Year limited replacement warranty



Item #0375

GemOro SparkleSpa Pro®

Prestige Series Personal Ultrasonic Jewelry Cleaner

ADVANCED PROFESSIONAL FEATURES:

- True professional grade ultrasonic jewelry cleaner for the home
- Approximate 25oz (750ml) tank capacity
- Powerful 42,000Hz energy producing sound waves per second
- Digital timer
- Auto shut-off function - 5 Cleaning cycles 90, 180, 280, 380 and 480 seconds
- Safely cleans most jewelry using regular tap water (for best results use GemOro SparklePak Plus solution Item #0937 sold separately)
- Bright blue LED illuminated stainless steel tank · Auto-opening transparent evaporation-free cover
- Quiet solid-state circuitry
- Elegant black European contoured design with chrome accents
- Removable basket and bracelet / watch holder included
- 50 / 60Hz
- 1 Year limited replacement warranty

Item #1791



GemOro SparkleSpa®

Personal Ultrasonic Cleaner

Cleans quickly and easily with powerful, yet gentle ultrasonic waves!

EXCITING FEATURES:

- It's simple - plug in, fill with water, place your jewelry in the basket and turn it on
- 600ml capacity ultrasonic tank
- Quickly and easily clean your jewelry with gentle, yet powerful ultrasonic sound waves
- No scrubbing or polishing required - cleans in only minutes
- NEW 3 Programmable cleaning cycles - 3, 5 and 10 minutes
- Although the SparkleSpa safely cleans most jewelry using regular tap water, for enhanced cleaning results we recommend GemOro SparklePak Plus cleaning solution (sold separately Item #0937)
- Guaranteed to remove dirt, grime, body oil, cosmetics and body care products from your jewelry
- NEW Designer white pearl finish
- Bright blue LED illuminates the stainless steel tank
- NEW Includes a removable basket and bracelet / watch holder
- 1 Year limited replacement warranty



Item #1783



STEAMER
POWER

ULTRASONIC
POWER-TIMER

STEAMER
READY

DANGER - HOT



10455 Olympic Drive, Dallas, Texas 75220 USA

Tel 800.527.0719 or 214.351.0380

Fax 800.832.9871 or 214.351.1903

www.sparkleexperts.com

www.gemoroproducts.com

sales@sparkleexperts.com

support@sparkleexperts.com